

Installation

This software requires **Java 1.7 or above**

Installation

1. Download the DLD.rar file and expand it in the folder where you want to install this software.
2. Go to the DLD folder and double-click the DLD.jar file.
3. An input box will appear. Enter your name as you want to appear on every circuit and module you design and distribute to others. The name must be 5-36 characters long.

Note for Teachers/Instructors:

Ask the students that they must enter their full name or registration number on first run of this software.